 


TECRO

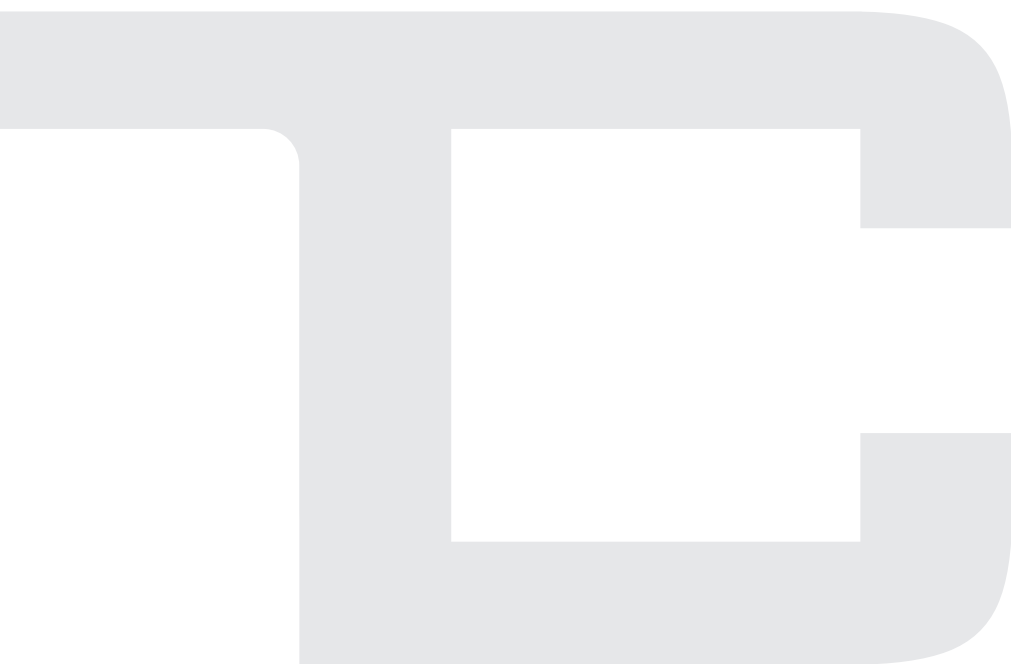

USER MANUAL / UPUTE ZA UPORABU

**VACUUM CLEANER / USISAVAČ PRAŠINE
PVUS-T722B OCEAN WAVE**

Importer for EU / Uvoznik za EU: Pevex d.d., Savska cesta 84,
10360 Sesvete, Hrvatska; email: info@pevex.hr

IMPORTANT SAFETY INSTRUCTIONS

1. Please read this manual carefully before using and keep it properly for future use!

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to.

2. Before turning on, ensure that your electrical voltage and circuit frequency correspond to those indicated on the appliance.

3. To reduce the risk of electrocution, never operate this product or handle the plug with wet hands, submerge it under water or spill liquids into the product.

4. Do not insert any objects into the appliance.

5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or an appropriately qualified person in order to avoid a hazard.

6. Check the appliance and cord regularly for visible damage. Do not use it if the cord or housing is damaged, if it has been dropped, damaged, left outdoors or dropped into water, or if it appears faulty in any way. Call the after sales support line if any part appears damaged.

7. Do not kink, bend, squash, strain or damage the power cord.

8. Do not pull or carry the vacuum cleaner by the cord. Do not use the cord as a handle, close a door on the cord or pull the cord around sharp edges or corners.

9. Do not run the vacuum cleaner over the cord. Keep the cord away from heated surfaces.

10. Turn off the vacuum cleaner controls before connecting or disconnecting it from the mains supply.

11. **WARNING:** Always switch off and unplug the vacuum cleaner before connecting or disconnecting the vacuum hose and accessories and before emptying or cleaning the dust tank.

12. Do not pull on the cord to disconnect the plug from the power supply. To unplug, grasp the plug, not the cord, and gently pull it out of the power point and then press the cord retraction button to

retract the cord.

13. Only use the vacuum cleaner on dry, indoor surfaces, as described in this manual and with the original accessories supplied by the manufacturer/distributor.

14. Do not use it for any purpose other than described in this manual.

15. Improper installation and use may result in the risk of fire, electric shock and/ or injury to persons. We assume no liability for any eventual damages caused by improper or faulty use.

16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.

17. Supervise young children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.

18. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and maintenance shall not be made by children unless they are older than 8 and supervised.

18. Never leave the appliance unattended.

19. Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.

20. Keep the end of the hose, wands and other openings away from your face and body.

21. Do not point the vacuum cleaner at people or animals when in use.

22. Do not use the product without the filters in place.

23. Take extra care when vacuuming on stairs.

24. Do not use the vacuum cleaner to pick up: flammable or combustible fluids (such as fuel or solvent); burning substances (such as ash, cigarettes or hot coals), or use it in the presence of explosive

liquids or vapors; hard or sharp objects such as shards of glass, nails, coins; harmful or toxic materials (such as chlorine bleach, ammonia, drain cleaner); any liquids, or vacuum in areas where liquids may be present.

25. Keep the vacuum cleaner away from heat sources (radiator, oven etc.), direct sunlight, moisture and sharp edges.

26. Keep all openings free of dust, lint, hair or anything that may reduce the airflow. Do not use the product with any openings blocked or restricted airflow.

28. IMPORTANT: Washing the filters improves vacuum performance. Make sure all filters are completely dry before reattaching them.

29. Only clean the housing with a soft, dry cloth. Do not use liquid or aerosol cleaners.

30. Store the vacuum cleaner indoors in a cool, dry area, out of reach of young children.

31. Never attempt to open the motor base of the vacuum cleaner yourself or to replace the power cord. If the vacuum cleaner is damaged, it must be repaired by the manufacturer or its service agent or an appropriately qualified person in order to avoid a hazard. In case of damage, call the after sales support line for advice.

32. This appliance is intended for household use only. It is neither suitable for commercial/industrial nor for outdoor use.

WARNING!

- Never use this machine when the suction power becomes very weak.

When this happens:

- Switch off the unit, unplug it and check whether the dust container is full.
- Then check if any part of the floor brush, tube or hose is blocked.

Do not use the vacuum cleaner until the blockage is removed and it operates normally again.

If you cannot solve the problem, contact the after sales support line.

 
- Always switch the vacuum cleaner off after use, and before plugging it in again, make sure to hold the vacuum cleaner firmly when using it.
- Always switch off and unplug the vacuum cleaner from the electrical outlet before assembling, opening or emptying the dust bag, or before connecting/ disconnecting the attachments.

STRUCTURE OF THE PRODUCT

OPERATION INSTRUCTION

- If the air outlet, the plastic tube or the hose is blocked, please switch off the appliance at once. Clear the blocked substance before starting the appliance again.
- Before using the appliance, please remove any large or sharp objects on the floor in order to prevent damages to the filter.

ASSEMBLING THE VACUUM CLEANER

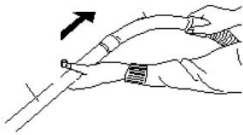Fitting the hose :	Insert the hose end into the hose inlet and turn clockwise to lock it.	
Remove the hose:	Turn the hose end in anti-clockwise and pull it out.	
Fitting the plastic tube to the handle:	Connect the plastic tube to the hose handle.	
Connect different accessories to the tube for different cleaning purposes:		
Floor brush :	For cleaning on carpets or floor.	
Crevice nozzle :	Dual-purpose crevice nozzle. Use to extend to vacuum down the side of cushions and etc. Turn the head through 90° to clean curtains, and etc.	

START OPERATION:

1. Before using the appliance, unwind a sufficient length of the power cord and insert the plug into the socket.
2. Press the On/Off button to turn on the appliance.
3. Move the speed control bar from side to side to adjust the suction power of the appliance.
4. To rewind the power cord, press the cord rewind button with one hand and guide the cord with another hand to ensure that it does not whip to cause damages.

 
Remark: Open and close the airflow slider to fine turn the suction power.



MAINTENANCE INSTRUCTION

Changing the Dust Bag:


1. When the dust bag full indicator turns to red, please switch off the appliance and unplug the power cord before cleaning out the dust or replacing a new bag.
2. Remove the hose.
3. Press the lid release lock and lift up the cover.
4. Lift the dust bag from the cradle and discard it.
5. Place a new bag in the cradle properly and close the lid.

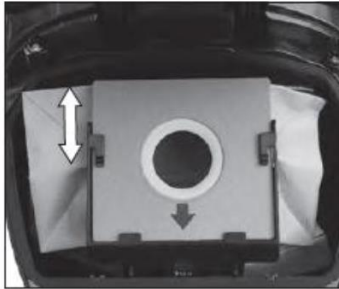

Cleaning and Replacing the Filter

Clean the two filters often. Failure to clean the filters regularly will reduce the cleaner efficiency and may shorten its lifespan.

 The inlet filter is at the rear of the inside compartment. Open the lid and pull the filter out of its cradle. Brush the inlet cavity out. This will help keeping the airways clean and maintain performance.

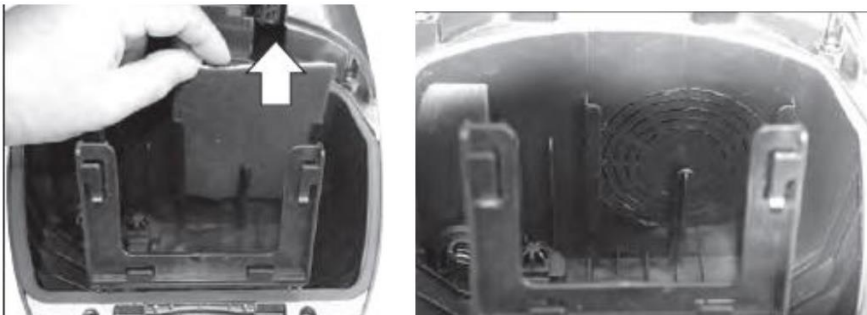

The motor filter is at the rear of the appliance. Lift off the filter cover. Wash the filter under running water and allow it to dry thoroughly before placing back to the appliance.



TRUBLESHOOTING

Levex s.r.l. do not accept any liability for damages resulting from the improper use of the device or its improper repair.

Problem	Possible cause	Solution
The electric motor does not work	Specifications, designs and dimensions are subject to change without prior notice. Check if the power plug is plugged well to the socket. • Check if there is power in the socket. • Check if the switch of the appliance is turned on.	Re-plug the plug to the socket. • Make sure there is power in the socket. • Press the On/Off button to turn on the appliance.
The suction power is weak	• Check if the floor brush or the hose is clogged. • Check if the dust bag is full of dust. • Check if the cover is closed. • Check if the filter is clogged. • Check if the plastic tube is well connected with the floor brush.	• Remove the clogging timely. • Clean or replace the dust bag. • Close the cover. • Clean the filter. • Connect the plastic tube and floor brush correctly.
The power cord cannot be winded up completely	• Check if the power cord is twisted.	• Pull out the power line for 2-3m, and then re-winding.
The power cord cannot be pulled out smoothly	• Check if the power cord is twisted.	• Press the cord rewind button, wind-up and pull-out the power cord repeatedly.
The speed cannot be regulated	• The speed control knob does not work, or the speed regulation engine falls off.	• Turn on and turn off the machine for several times, and if it still does not work, send to the maintenance centre for repair.
The power cord winds up automatically	• The winder winds up the power cord automatically.	• Pull out and wind up the power cord for 4-5 times, and if it is still out of order, send to the maintenance centre for repair.

SPECIFICATION

Model No.	PVUS-T722B Ocean Wave
Product name	Vacuum Cleaner
Rated Voltage/Frequency	220-240V~ 50/60Hz
Rated Power	700W
Dimension (W x H x D)	370 x 265 x 213 mm

Pe vex d.d. do not accept any liability for damages resulting from the improper use of the device or its improper repair.

Specifications, designs and dimensions are subject to change without prior notice.



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

SIGURNOSNA UPOZORENJA

1. Prije uporabe pažljivo pročitajte ove upute i sačuvajte ih za buduću uporabu. Pročitajte ove upute čak i ako ste upoznati sa uporabom ovog uređaja. Ovdje navedene sigurnosne mjere opreza smanjuju rizik od požara, električnog udara i ozljeda ako ih se podržavate.
2. Prije uključivanja provjerite odgovaraju li napon u vašem domu onome navedenom na uređaju.
3. Da biste smanjili rizik od električnog udara nikad nemojte koristiti ovaj uređaj mokrim rukama, potopiti ga u vodu ili proliti tekućinu po njemu.
4. Ne stavljate nikakve predmete u otvore.
5. Ako je kabel oštećen mora ga zamijeniti proizvođač ili serviser ili osoba sa sličnim kvalifikacijama kako bi se izbjegao strujni udar.
6. Redovito provjeravajte vidljiva oštećenja na uređaju i kabelu. Ne koristite ga ako je kabel ili kućište oštećeno, ako vam je uređaj ispao, ako je ostavljen na otvorenom, ako vam je uređaj pao u vodu ili ako se na bilo koji način čini neispravnim. Ako se neki dio ošteti nazovite ovlašteni servisni centar.
7. Nemojte savijati, natezati ili oštećivati kabel napajanja.
8. Usisavač nemojte povlačiti za kabel, nemojte ga nositi držeći ga samo za kabel. Nemojte koristiti kabel kao ručku, nemojte ga zatvarati vratima, nemojte povlačiti preko oštih rubova i uglova.
9. Ne povlačite uređaj preko kabela. Držite kabel podalje od vrućih površina.
10. Prije uključivanja ili isključivanja uređaja iz strujnog napajanja, isključite uređaj.
11. Uvijek isključite uređaj iz strujnog napajanja prije sastavljanja uređaja ili pražnjenja i čišćenja spremnika za prašinu.
12. Ne povlačite kabel kako biste iskopčali utikač iz napajanja. Da biste isključili uređaj, uhvatite utikač, a ne kabel i izvucite ga iz napajanja, a zatim pritisnite prekidač za namatanje kabela da biste ga uvukli.
13. Uređaj koristite samo na unutarnjim, suhim površinama, kako je opisano u ovim uputama, i sa originalnim priborom koji isporučuje distributer.
14. Nemojte koristiti uređaj u druge svrhe osim one opisane u ovim

uputama.

15. Nepravilna ugradnja ili uporaba može dovesti do opasnosti od požara, strujnog udara i/ili ozljede ljudi. Ne preuzimamo odgovornost za eventualne štete nastale nepropisnom ili neispravnom ugradnjom.

16. Ovaj aparat nije namijenjen osobama (uključujući djecu) sa smanjenim fizičkim ili mentalnim sposobnostima niti osobama koje nemaju dovoljno iskustva i znanja, osim ako im je osoba odgovorna za njihovu sigurnost dala dopuštenje ili ih uputila u korištenje aparata.

17. Malu djecu potrebno je nadzirati kako se ne bi igrala s uređajem.

18. Aparat smiju upotrebljavati djeca starija od 8 godina i osobe s ograničenim fizičkim, osjetilnim ili mentalnim sposobnostima te nedostatnim iskustvom i znanjem u vezi sa sigurnom uporabom pećnice. U tom im slučaju treba omogućiti razumijevanje potencijalnih opasnosti. Nadzirajte djecu kako biste osigurali da se ne igraju sa aparatom.

18. Nikad ne ostavljajte uređaj bez nadzora.

19. Pazite da vam kosa, viseći dijelovi odjeće, prsti ili drugi dijelovi tijela ne dođu u dodir s otvorenim ili pomičnim dijelovima uređaja.

20. Držiti kraj crijeva i ostalih otvora dalje od lica i tijela.

21. Ne usmjeravajte usisavač u ljude ili životinje dok se koristi.

22. Ne koristite uređaj bez filtera.

23. Budite posebno oprezni prilikom usisavanja stepenica.

24. Nemojte koristiti uređaj za usisavanje: zapaljivih tekućina poput goriva ili otapala, izgarajućih tvari (pepeo, cigarete ili vrući ugljen) ili ga koristiti u prisutnosti eksplozivnih tekućina ili para; tvrdih ili oštih predmeta kao što su komadići stakla, kovanice; štetni ili toksični materijali (kao što je izbjeljivač, klor, amonijak, sredstvo za čišćenje odvoda; bilo koje tekućine.

25. Uređaj držite dalje od izvora topline (radijatora, pećnica, itd), izravne sunčeve svjetlosti, vlage i oštih rubova.

26. Držite sve otvore slobodne od prašine, dlaka, kose ili bilo čega što bi smanjilo protok zraka. Nemojte koristiti proizvod sa blokiranim ili ograničenim protokom zraka.

28. UPOZORENJE: Pranje filter poboljšava rad uređaji. Filteri moraju

biti potpuno suhi prije postavljanja.

29. Kućište čistite samo suhom i mekom krpom. Nemojte koristiti tekuća ili aerosolna sredstva za čišćenje.

30. Usisavač čuvajte na zatvorenom, hladnom i suhom mjestu, te van dosega male djece.

 
31. Nikada ne pokušavajte sami otvoriti bazu motora uređaja ili zamijeniti kabel napajanja. Ako je uređaj oštećen kontaktirajte ovlašteni servisni centar.

32. Usisavač koristite samo za kućnu uporabu, i u zatvorenim prostorijama! Nije za profesionalnu uporabu.

UPOZORENJE!

- Nikad ne koristite uređaj ako snaga usisavanja postane slaba.
U tom slučaju:
 - Isključite uređaj iz napajanja i provjerite da li je spremnik za prašinu pun.
 - Provjerite da li je bilo koji dio cijevi, crijeva ili četke blokiran.
Nemojte koristiti usisavač dok ne uklonite blokadu.
Ako ne možete otkloniti problem kontaktirajte ovlašteni servisni centar.
- Usisavač uvijek isključite iz utičnice nakon uporabe.
- Usisavač uvijek isključite iz utičnice prije sastavljanja, otvaranja ili pražnjenja vrećice za prašinu ili prilikom sastavljanja uređaja.


OPIS PROIZVODA

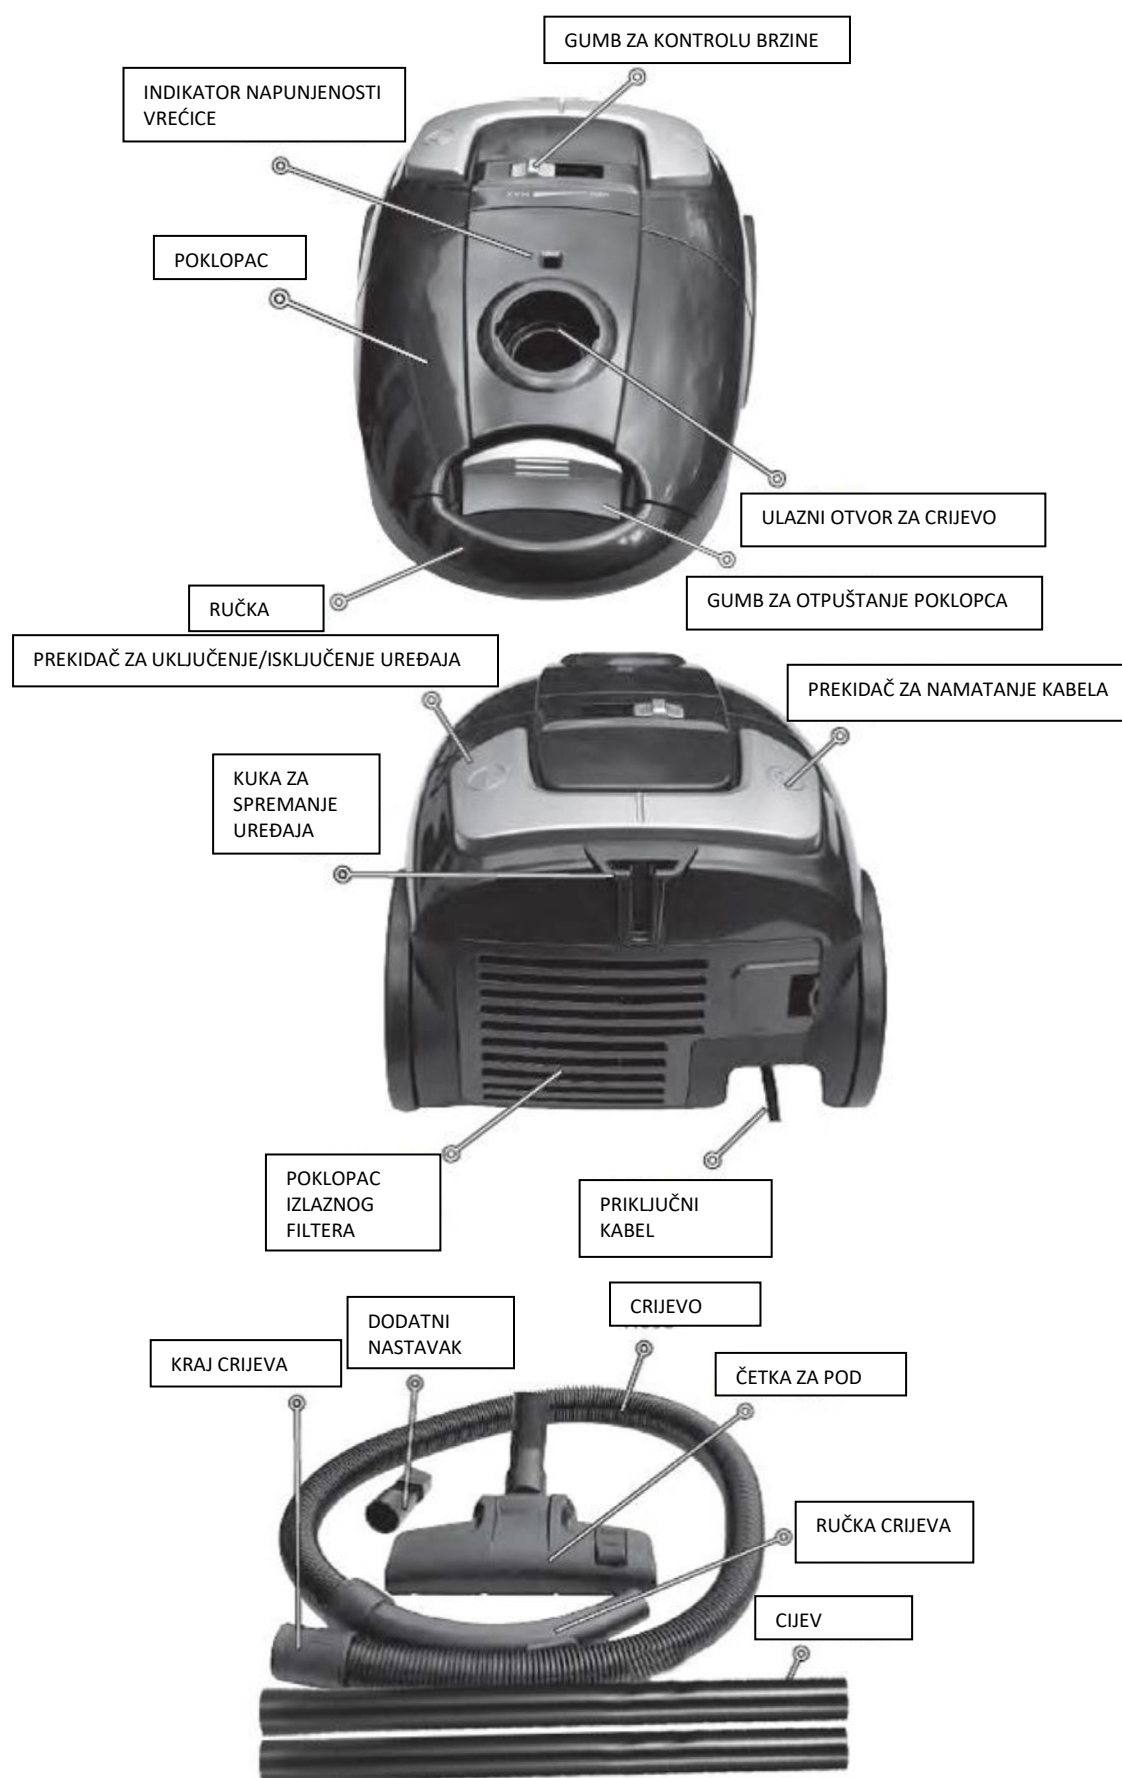

UPUTE ZA UPORABU

- Ako su otvor za zrak, cijev ili crijevo blokirani, odmah isključite uređaj. Uklonite objekt koji blokira protok zraka prije ponovnog pokretanja uređaja.
- Prije uporabe uređaja, uklonite sve velike i oštre predmete kako bi izbjegli oštećenje filtera.

 SASTAVLJANJE UREĐAJA

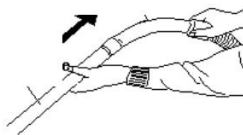Montaža crijeva:	Umetnite kraj crijeva u otvor za crijevo i Okrenite ga u smjeru kazaljke na satu da ga zaključate	
Skidanje crijeva	Okrenite crijevo suprotno kazaljke na satu i izvucite ga iz otvora.	
Postavljanje plastične cijevi na crijevo:	Spojite plastičnu cijev na crijevo.	
Priključite različite dodatke na cijev u svrhu čišćenja:		
Četka za pod :	Za čišćenje podova i tepiha.	
Mala četka :	Za čišćenje uglova, zavjesa, sofa.	

POČETAK RADA:

1. Prije uporabe, izvucite dovoljnu duljinu kabela i umetnite utikač u utičnicu.
2. Pritisnite prekidač za uključivanje/isključivanje uređaja.
3. Koristite gumb za kontrolu brzine kako biste dobili željeni intenzitet usisavanja.
4. Kako biste namotali kabel, jednom rukom pritisnite prekidač za namatanje kabela, a drugom rukom držite kabel kako bi spriječili mogućnost udarca zamahom ili moguća oštećenja kabela.

 
Napomena: Otvorite i zatvorite klizač protoka zraka kako biste regulirali usisnu snagu.



ODRŽAVANJE UREĐAJA

Promjena vrećice za prašinu

1. Kada indikator napunjenosti vrećice postane crveni potrebno je očistiti vrećicu za prašinu ili je zamijeniti novom.
2. Uklonite crijevo.
3. Pritisnite prekidač za otpuštanje poklopca i uklonite poklopac.
4. Podignite vrećicu s postolja i uklonite je.
5. Stavite novu vrećicu u ležište i zatvorite poklopac.

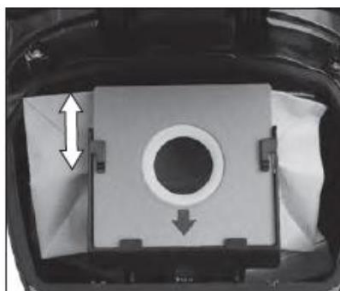

Čišćenje i zamjena filtera

Redovno čišćenje filtera doprinjeti će boljoj usisnoj snazi uređaja.

Ulazni filter nalazi se na stražnjoj strani unutarnjeg odjeljka. otvorite poklopac i izvucite filter iz njegovog ležišta. Očistite ležište filtera kako bi održavali performanse uređaja.



Filter motora nalazi se na stražnjoj strani uređaja. Podignite poklopac filtera. Operite filter pod tekućom vodom i dobro ga osušite prije nego ga vratite u uređaj.



RJEŠAVANJE PROBLEMA

Problem	Uzrok problema	Rješenje
Elektromotor ne radi	• Provjerite da li je utikač dobro uključen u utičnicu. • Provjerite ako ima struje u utičnici. • Provjerite ako je prekidač za uključivanje uključen.	• Uključite utikač u utičnicu. • Budite sigurni da ima struje u utičnici. • Pritisnite prekidač za uključivanje/isključivanje.
Snaga usisavanja je slaba	• Provjerite da je četka za pod ili crijevo začepljeno. • Provjerite da li je vrećica za prašinu puna. • Provjerite da li je poklopac zatvoren. • Provjerite da li je filter začepljen. • Provjerite da li je cijev dobro spojena sa podnom četkom.	• Uklonite začepljenje. • Zamijenite vrećicu za prašinu. • Zatvorite poklopac. • Očistite filter. • Ispravno instalirajte podnu četku na cijev.
Kabel napajanje ne može se potpuno namotati.	• Provjerite da li je kabel presavijen.	• Izvucite kabel za 2-3m i ponovno ga namotajte
Kabel se ne može lako izvući.	• Provjerite da li je kabel presavijen.	• Pritisnite gumb za namatanje kabela i izvucite i namotajte kabel više puta.
Brzina se ne može regulirati.	• Gumb za regulaciju brzine ne radi ili motor regulacije brzine ne radi.	• Uključite i isključite uređaj više puta. Ako uređaj ne proradi, pošaljite ga u ovlaštenu servis na popravak.
Kabel se namata automatski.	• Omotač namata kabel automatski.	• Izvucite i namotajte kabel 4-5 puta, ako i dalje ne radi ispravno, pošaljite ga u ovlaštenu servis na popravak.

SPECIFIKACIJA MODELA

Naziv modela:	PVUS-T722B Ocean Wave
Naziv uređaja:	Usisavač prašine
Napon/Frekvencija	220-240V~ 50/60Hz
Snaga:	700W
Dimenzije (Š x V x D)	370 x 265 x 213 mm

Pevex d.d ne prihvaća nikakvu odgovornost za štete koje bi bile posljedica pogrešne uporabe uređaja ili njegovih nestručnih popravaka. Pevex d.d pridržava pravo izmjene uređaja i/ili njegovih karakteristika bez prethodne najave.



Simbol prekrižene kante za otpad znači da je proizvod potrebno zbrinuti odvojeno od otpada iz kućanstva. Proizvod je potrebno proslijediti na reciklažu u skladu s lokalnim propisima o zaštiti okoliša za zbrinjavanje otpada. Odvajanjem označenog proizvoda od otpada iz kućanstva pomoći ćete u smanjivanju količine otpada poslanog u spalionice ili na deponije i minimizirati potencijalno negativan učinak na zdravlje ljudi i okoliš.